

 
MODEL NO: PHC - 1000K

Instructions:

1. Set the voltage switch to the correct setting for your equipment (3, 5, 6, 7.5, 9 or 12V).
2. Select the detachable plug that fits your equipment's DC power jack.
3. If the power jack on the equipment is marked \ominus — \oplus , align TIP on the power cord with + on the detachable plug. If the power jack on the equipment is marked \oplus — \ominus , align TIP on the power cord with - on the detachable plug.(Fig.1)

Important Notes:

- Your equipment must be rated at 3, 5, 6, 7.5, 9 or 12 volts and no more than 1200 milliamps to use this adapter. Plugging the adapter into an equipment that has different ratings could damage the equipment or the adapter. MANUFACTURER/SUPPLIER assumes no responsibility if improperly used.
- Be sure to set the correct tip polarity. Incorrect tip polarity can damage the equipment or the adapter.
- Disconnect the adapter from AC outlet when not in use



For positive tip polarity
Pour une polarité positive

For negative tip polarity
Pour une polarité négative

Fig.1/III.1

INPUT/ENTRÉE: 90-240V AC 60/50Hz 20W
OUTPUT/SORTIE: 3, 5, 6, 7.5, 9 AND 12V DC
REGULATED
CURRENT/COURANT: 0-1200mA MAX.

OUTPUT PLUGS

- | | |
|-------------------|-------------------|
| 1) 3.5 mm | 2) 3.5 x 1.35 mm |
| 3) 5.5 x 2.5 mm | 4) 5.5 x 2.1 mm |
| 5) 4.0 x 1.7 mm | 6) 4.75 x 1.75 mm |
| 7) 2.35 x 0.75 mm | |



MADE IN CHINA H2)